


BOSS®

JUMBO  Griller
B-513

1500
WATT

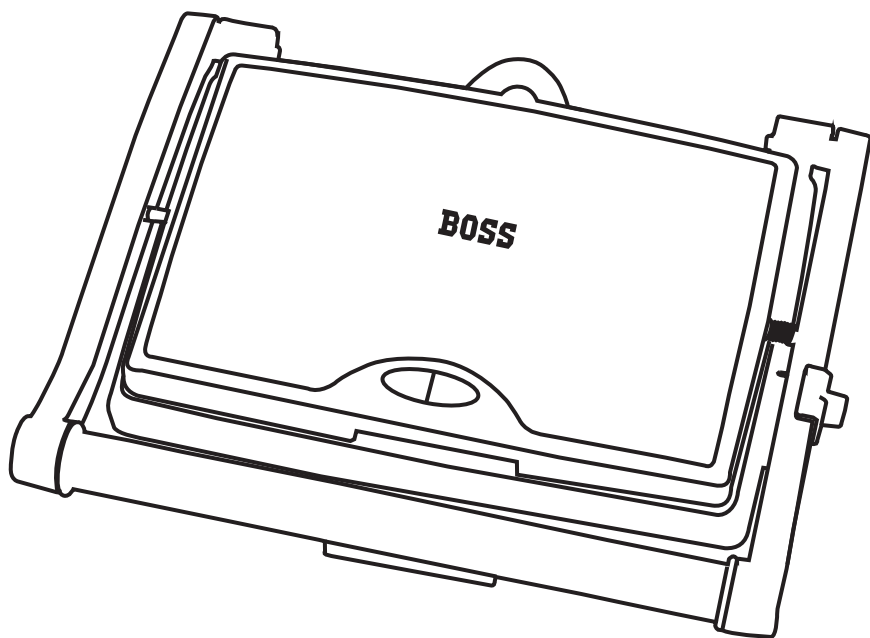

2 YEARS
WARRANTY
ON PRODUCT

6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION

INSTRUCTION MANUAL

Please read all instructions carefully before using • T & C Apply*

Dear Customer,

Thank you for choosing BOSS Jumbo Griller, of which you are now the proud owner.

Delicious Grilled snacks are now simple to make with BOSS Jumbo Griller. Prepare healthy and tasty sandwiches in the convenience of your kitchen. The non-stick coated plates need less oil while toasting making the sandwich healthy and are easier to clean too. Get perfectly Grilled sandwiches that are crispy on the outside and soft on the inside with this appliance.


Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Jumbo Griller, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCES LLP

KNOW YOUR APPLIANCE

- 1 Ready Lamp
- 2 Power Lamp
- 3 Handle Clip
- 4 Top Housing
- 5 Cooking Plate
- 6 Bottom Housing

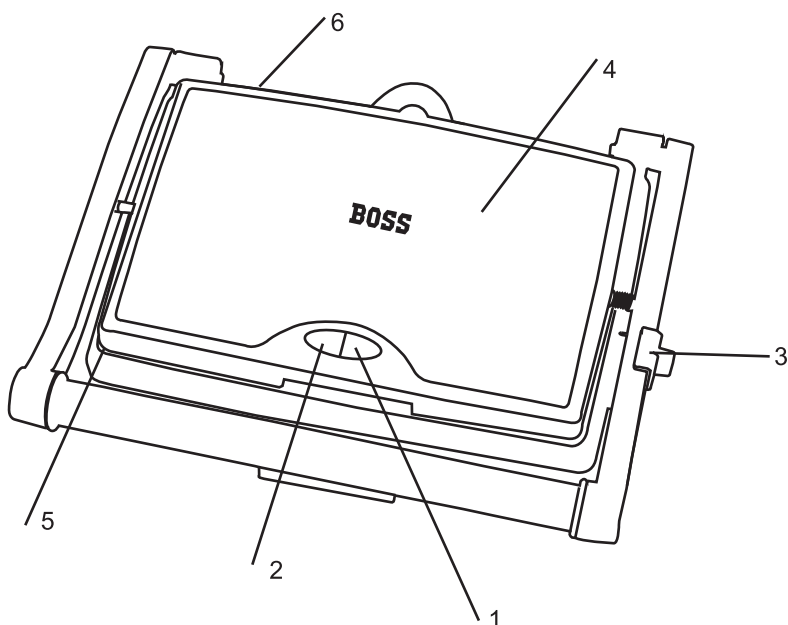

TECHNICAL SPECIFICATIONS

Model No	B-513
Power Consumption	1500W
Voltage	230V~ 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice*

IMPORTANT

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility or call our customer service number for information on examination, repair, or adjustment.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces.
7. Do not place on or near a hot gas, electric burner, in a heated oven other inflammable materials (such as benzene, paint thinner, sprays, etc.)
8. Preheat the unit before using.
9. Do not leave the appliance unattended when switched on.
10. To disconnect, remove plug from wall outlet.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. The temperature of accessible surfaces may be high when the appliance is operating.

PREPARE TO USE

1. Wipe the surface of the cooking plates with a damp cloth and dry.
2. For best results, always pre-heat the grill for 3 to 4 minutes before use without any food inside.

NOTE: FIRST USE WILL BURN OFF THE MANUFACTURER'S PROTECTIVE COATING. THIS MAY CAUSE SLIGHT SMOKING FROM THE UNIT. IT IS NOT HARMFUL AND WILL STOP AFTER FIRST USE. BE SURE ROOM IS PROPERLY VENTILATED.

HOW TO USE –GRILLER PLATE

1. Season the plates with butter or margarine if desired.
2. The indicator light will glow once the grill is in use.
 - When grilling thick food, do not lock the unit
 - When grilling thick raw materials, keep an eye on the unit in service
3. Use only wooden or plastic spatula to remove sandwich out of the griller.
4. The power shall be shut off once the product is not in use. Clean the heating plate and the product only after the product is cooled down.

CLEANING & MAINTENANCE

1. Always unplug this product from power source and wait until it cool down before cleaning.
2. Ensure the heating plate is completely cooled.
3. Wash heating plate with a soft sponge, Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
4. Do not use cleansers or oven cleaners on the heating plates.
5. To clean out parts, handles and other parts, use a damp cloth. Dry it carefully.

CAUTION: DO NOT IMMERSE IN WATER