

 
BOSS®

SHARP

Griller Toaster


B-514

750
WATT

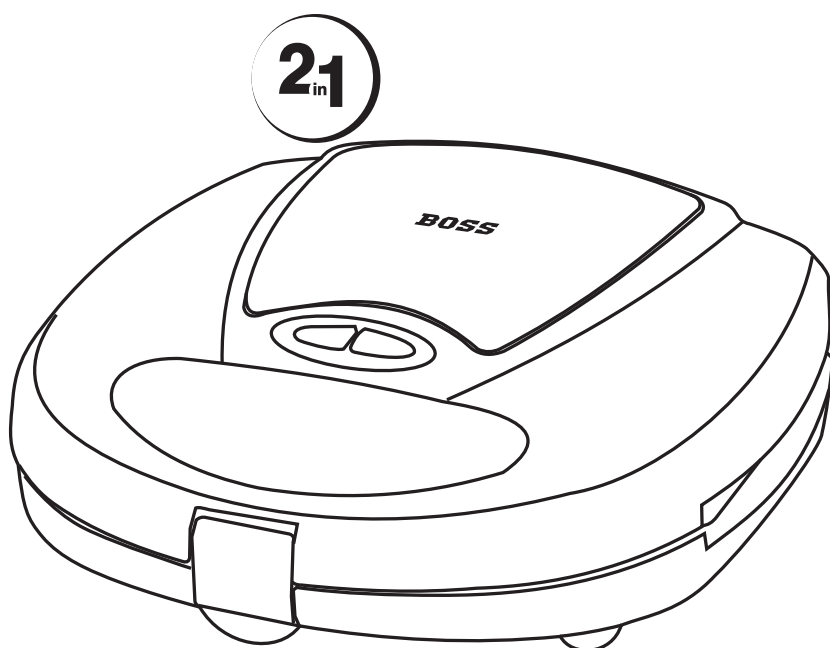

2 YEARS
WARRANTY
ON PRODUCT

 6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION



INSTRUCTION MANUAL

Please read all instructions carefully before using

Dear Customer,

Thank you for choosing BOSS Sharp Griller Toaster, of which you are now the proud owner.

Now making sandwiches has become a lot easier with the BOSS Sharp sandwich maker. Prepare healthy and tasty sandwiches at the convenience of your kitchen. Perfectly toasted & grilled sandwiches anytime with this hi-temperature, hi-power sandwich maker with Non-stick plates, which allow you to use less oil or butter and seal ingredients inside.

 
Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Sandwich maker, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCE LLP

KNOW YOUR APPLIANCE

- 1 Ready Lamp
- 2 Power Lamp
- 3 Handle Clip
- 4 Top Housing
- 5 Cooking Plate
- 6 Bottom Housing

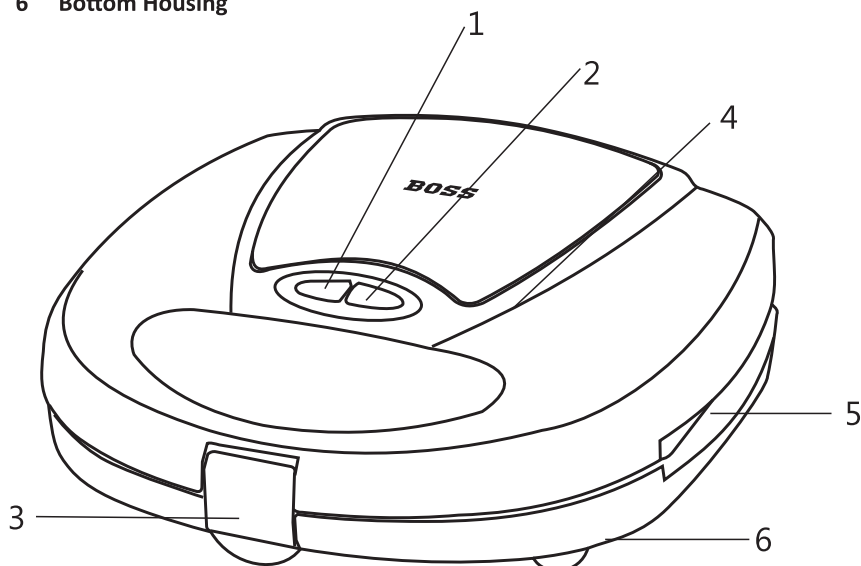

TECHNICAL SPECIFICATIONS

Model No	B-514
Power Consumption	750W
Voltage	230V~ 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice*

IMPORTANT

Please read the following instructions carefully before using the toaster.

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
4. Unplug from outlet when not in use and before cleaning. Allow cooling before putting on or taking off parts.
5. Do not use metal objects like knives, forks etc as they may damage the toasting plate.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility or call our customer service number for information on examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces.
9. Do not place on or near a hot gas, electric burner, in a heated oven other inflammable materials (such as benzene, paint thinner, sprays, etc.)
10. Do not leave the appliance unattended when switched on.
11. The temperature of accessible surfaces may be high when the appliance is operating.

PREPARE TO USE

- When using the Sandwich Maker for the first time, after unpacking your Sandwich Maker, open the lid, clean the cooking surfaces thoroughly by wiping with a damp sponge and dry the surfaces with a paper towel.
- For best results, brush a little butter on the plates and heat the appliance with the lid open for 5 minutes.

CAUTION: First use will burn off the manufacturer's protective coating. This may cause slight smoking from the unit. It is not harmful and will stop after first use. Be sure room is properly ventilated.

HOW TO USE – TOASTER PLATE

1. Season the plates with butter or margarine if desired
2. Toast for about 3 to 6 minutes or until golden brown, adjusting the time to suit your own individual taste
3. When the red indicator is off, Sandwich can be put into the heating plate for toasting.
4. Use only wooden or plastic spatula to remove sandwich out of the toaster.
5. The power shall be shut off once the product is not in use. Clean the heating plate and the product only after the product is cooled down.

HOW TO USE – GRILLER PLATE

1. Season the plates with butter or margarine if desired.
2. When the red indicator is off, Sandwich can be put into the heating plate for grilling.
3. Slowly press the upper and lower grilling plate till it is locked tightly by handle clip so that the food can be grilled evenly.
 - * When grilling thick food, do not lock the unit
 - * When grilling thick raw materials, keep an eye on the unit in service
4. Use only wooden or plastic spatula to remove sandwich out of the griller.
5. The power shall be shut off once the product is not in use. Clean the heating plate and the product only after the product is cooled down.

HOW TO REMOVE OR CHANGE PLATES

- Always unplug the appliance and allow it to cool before removing plates.
- Open the toaster.
- Locate the plate release buttons on front of the unit. Press firmly on the button and plate will pop up slightly from the base. Grasp the plate with two hands, side it out from under the metal brackets, and lift it out of base.

CLEANING

1. Always unplug this sandwich maker from power source and wait until it cool down before cleaning.
2. Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
3. Do not use cleansers or oven cleaners on the heating plates.
4. To clean handles and other parts, use a damp cloth with mild soap. Dry carefully afterwards.

CAUTION: DO NOT IMMERSE IN WATER