


# BOSS®

**ULTRA**  
GRILLER TOASTER

B-523

**750**  
**WATT**

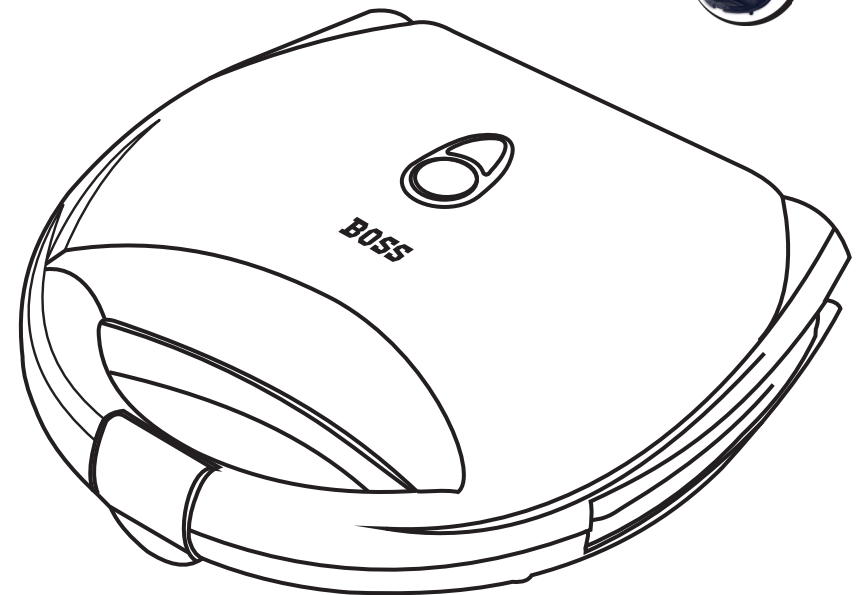

**2** YEARS  
WARRANTY

**6** MONTHS  
EXTENDED  
WARRANTY  
ON REGISTRATION

CE

## INSTRUCTION MANUAL

Please read all instructions carefully before using T&C Apply\*

Dear Customer,

Thank you for choosing BOSS Ultra Griller Toaster, of which you are now the proud owner.

Delicious Grilled snacks are now simple to make with BOSS Ultra Griller Toaster. Prepare healthy and tasty sandwiches in the convenience of your kitchen. The non-stick coated plates need less oil while grilling, making the sandwich healthy and are easier to clean too. Get perfectly Grilled sandwiches that are crispy on the outside and soft on the inside with BOSS Ultra Griller Toaster.


Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Ultra Griller Toaster, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCES LLP

## KNOW YOUR APPLIANCE

- 1 Ready Lamp
- 2 Power Lamp
- 3 Handle Clip
- 4 Top Housing
- 5 Cooking Plate
- 6 Bottom Housing

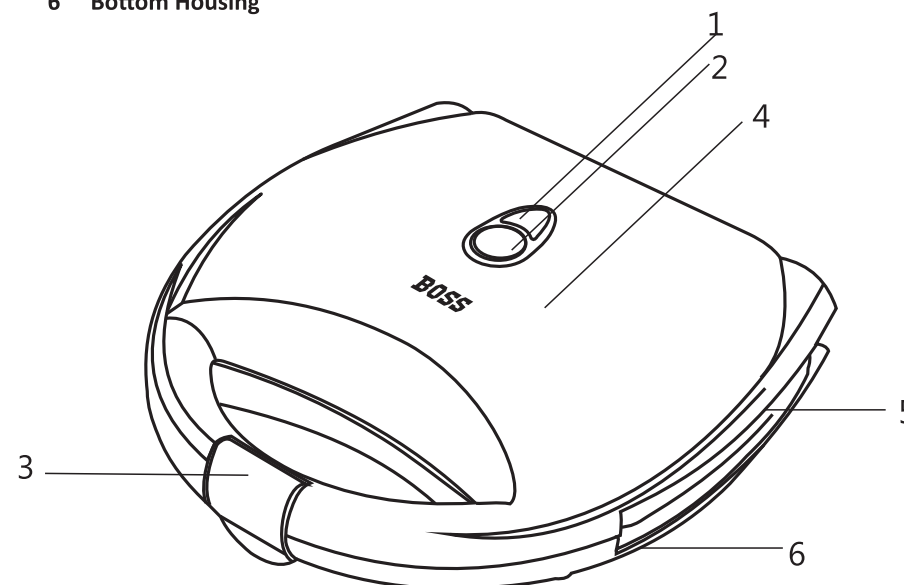

## TECHNICAL SPECIFICATIONS

Model No	B-523
Power Consumption	750W
Voltage	230V~ 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice\*

## IMPORTANT

Please read the following instructions carefully before using the sandwich maker.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow cooling before putting it on or taking off parts.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility or call our customer service number for information on examination, repair, or adjustment.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces.
7. Do not place on or near a hot gas, electric burner, in a heated oven other inflammable materials (such as benzene, paint thinner, sprays, etc.)
8. Preheat the unit before using.
9. Do not leave the appliance unattended when switched on.
10. To disconnect, remove plug from wall outlet.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. HOUSEHOLD USE ONLY.

## PREPARE TO USE

- When using the Sandwich Maker for the first time, after unpacking your Griller Sandwich Maker, open the lid, clean the cooking surfaces thoroughly by wiping with a damp sponge and dry the surfaces with a paper towel.
- For best results, prepare the non-stick surfaces by using a paper towel to wipe a thin layer of vegetable oil onto the non-stick surfaces of the Griller Sandwich Maker.

**CAUTION:** Always use protective, heat-resistant, gloves or mitts when handling this product to avoid steam or other burns.

## HOW TO USE

- Season the plates with butter or margarine if desired.
- Plug the unit into a suitable electrical outlet. The red control light will light up.
- Close the griller sandwich maker and prepare desired grill sandwiches while the unit is heating up.
- When the griller sandwich maker's thermostat has reached the right temperature, the green control light will go on.
- Prepare grill sandwiches by buttering bread on outer surfaces and placing desired ingredients within. Lift safety handle clip and open the griller sandwich maker. Place grill sandwiches on the heating plates.
- Close the top lid of the griller sandwich maker, do not force shut. Make sure that the lock snaps in so that appliance is securely locked. Steam will eject from between the griller sandwich maker so please ensure that fingers do not come in contact with steam.
- During the toasting and process of making the grill sandwiches, the green control light will periodically turn on and off. This indicates that the appliance is heating itself, so as to maintain the desired temperature.
- Your grill sandwich will be toasted in 2-3 minutes or longer to suit your taste.
- Open the griller sandwich maker and remove grill sandwiches using a wooden spatula.
- Close the top of the griller sandwich maker to preserve the heat until ready to toast the next grill sandwich.
- After use, turn off the appliance and unplug from the wall.

## CLEANING

1. Always unplug this griller sandwich maker from power source and wait until it cool down before cleaning.
2. There is no need to open your griller sandwich maker apart for cleaning. Dry clean with a paper towel to absorb excess oil. Brush crumbs from the grooves, and wipe with damp cloth and mild soap.
3. Never immerse in water. Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
4. Do not use cleansers or oven cleaners on the heating plates.
5. To clean handles and other parts, use a damp cloth with mild soap.
6. Should any filling be difficult to remove, pour a little cooking oil onto the plate and wipe off after 5 minutes, when the filling has softened.

**CAUTION:** DO NOT IMMERSE IN WATER

## MAINTENANCE

This appliance requires little maintenance. It contains no user serviceable parts. Do not try to repair it yourself. Refer it to qualified personnel if servicing needed.