


BOSS®

Eden★

4 Slice Pop-Up Toaster

B-527

1100
WATT

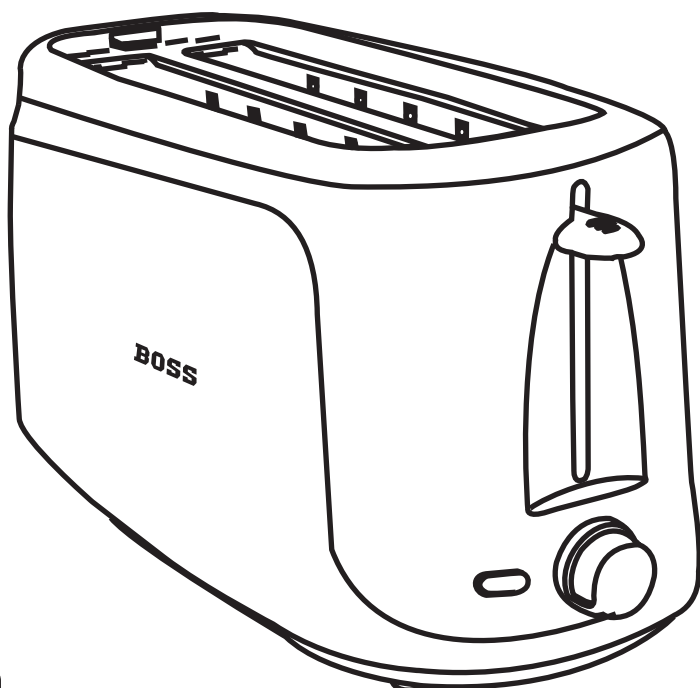

2 YEARS
WARRANTY
ON PRODUCT

6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION

INSTRUCTION MANUAL


WARNING

When using electrical appliance. Basic safety precautions should always be followed:

- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- Do not touch hot surface.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- Unplug unit from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Do not let the cord hang over edge of table or counter, or touch hot surface.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Don't attempt to dislodge food when toaster is in operation
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

KNOW YOUR APPLIANCE

1. Bread Slot
2. Housing
3. Removable Crumb Tray
4. Carriage Handle
5. Control Knob
6. Base
7. Cancel Button

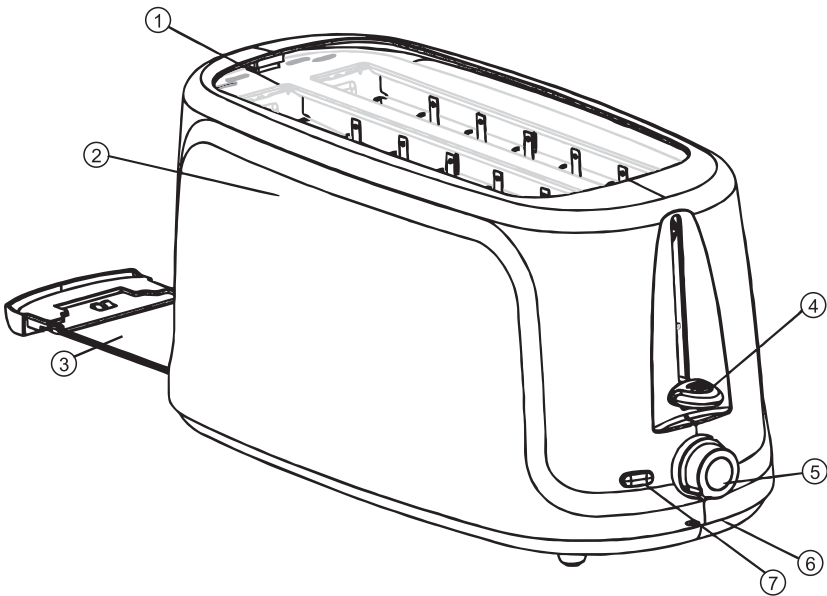

TECHNICAL SPECIFICATIONS

Model No	B-527
Power Consumption	1100W 230V~ 50 Hz

The specifications and design are subject to change without notice*

HOW TO USE :

As there is manufacturing residue or oil remained in the toaster or heat element, it usually emits the odor for the first use. It is normal and will not occur after several times use, for the first use it is suggested the operation according to the below steps, except without bread, then let the toaster cool down and begin toasting the first slice.

1. Put bread slice into the bread slot, which can be inserted with four slices at most each time.

NOTE: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into the outlet.
3. Set color control knob to your desired level. There is 7-position level, the lowest “1” is for light and the highest “7” is for dark. The bread slice can be toasted to golden color at the middle position.
4. Press carriage handle down vertically until it is latched in place, the indicator of Cancel will be illuminated, and the appliance will begin toasting at once.
5. Once the bread has been toasted, the carriage handle will automatically pop up. Also you can uplift the carriage handle a little to remove the bread readily.

NOTE: During toasting, you may also observe the toasting color. If it is satisfactory, you can press the Cancel button to cancel the operation at any time, but never lift carriage handle to cancel toasting.

6. If the bread has been taken out from refrigerator, set control knob accordingly.

NOTE :

1. Remove all protective wrappings prior to toasting.
2. If toaster starts to smoke, Press the press key to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice.
6. In order to achieve uniform colour we recommend that you should wait minimum 30s between each toasting.

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and let the appliance cool down completely.
2. Wipe the outside with soft dry cloth, never use metal polish.
3. Pull out crumb tray at the bottom of toaster and empty it. Make sure the crumb tray is completely closed before using the toaster again.
4. When not use or storage, the power cord may be wound under the bottom of toaster.