

BOSS®

Toasty

Sandwich Maker

E-502

750
WATT



2 YEARS
WARRANTY

6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION

INSTRUCTION MANUAL

Please read all instructions carefully before using • T&C Apply

Dear Customer,

Thank you for choosing BOSS Toasty Sandwich Maker, of which you are now the proud owner.

Now making sandwiches has become a lot easier with the BOSS Toasty sandwich maker. Prepare healthy and tasty sandwiches at the convenience of your kitchen. Perfectly Sandwiches anytime with this hi-temperature, hi-power sandwich maker with Non-stick plates, which allow you to use less oil or butter and seal ingredients inside.


Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Toasty Sandwich Maker, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCES LLP

KNOW YOUR APPLIANCE

- 1 Power Lamp
- 2 Handle Clip
- 3 Top Housing
- 4 Cooking Plate
- 5 Bottom Housing

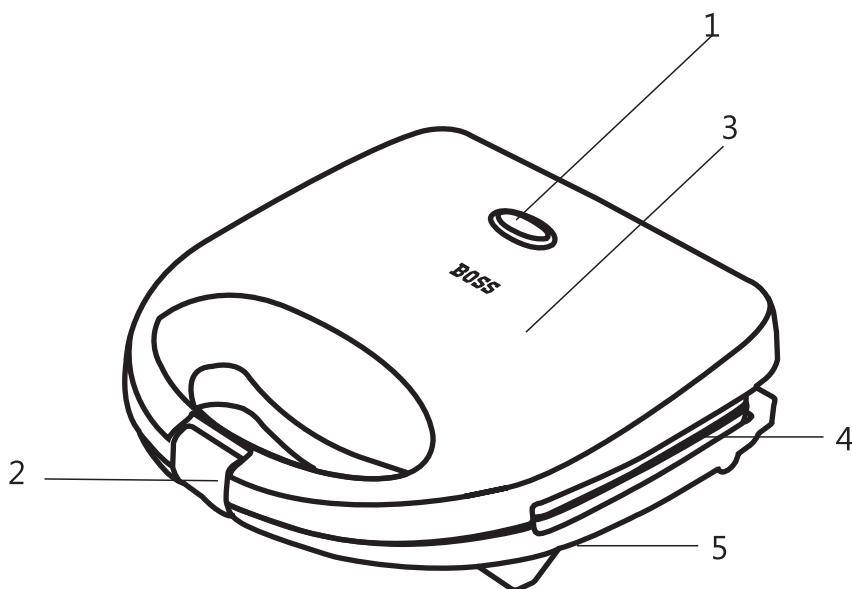

TECHNICAL SPECIFICATIONS

Model No	E-502
Power Consumption	750W
Voltage	230V~ 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice*

IMPORTANT

Please read the following instructions carefully before using the sandwich maker.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. No user- serviceable parts inside. Return appliance to the nearest authorized service facility or call our toll-free customer service number for information on examination, repair, or adjustment.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not use outdoors.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. To preheat the unit about 2 minutes before using.
10. This appliance is for household use only.
11. Close supervision is necessary when any appliance is used by or near children.
12. Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.)
13. Warning: Do not use this appliance near water.
14. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, swimming pool etc. where the likelihood of immersion or splashing could occur.
15. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
16. Do not leave the appliance unattended when switched on.
17. Do not use appliance for other than intended use.
18. Always attach plug to appliance first, then plug cord in the wall outlet.
19. To disconnect, remove plug from wall outlet.
20. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
21. The appliance is only to be operated in the closed position.

WARNING: To prevent electric shock, unplug before cleaning.

23. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
24. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
25. Children should be supervised to ensure that they do not play with the appliance.
26. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
27. The temperature of accessible surfaces may be high when the appliance is operating.

ADDITIONAL SAFEGUARD

THIS APPLIANCE IS INTENDED FOR INDOOR HOUSEHOLD USE ONLY.

DO NOT OPERATE APPLIANCE IF THIS LINE CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY

OPERATING INSTRUCTIONS

NOTE: When using the Sandwich Maker for the first time, after unpacking your Sandwich Maker, open the lid, clean the cooking surfaces thoroughly by whipping with a damp sponge and dry the surfaces with a paper towel. For best results, prepare the non-stick surfaces by using a paper towel to wipe a thin layer of vegetable shortening or oil onto the non-stick surfaces of the Sandwich Maker.

CAUTION: Always use protective, heat-resistant, gloves or mitts when handling this product to avoid steam or other burns.

How to use sandwich Maker

1. Always preheat before use. Plug cord into a rating 220-240-volt AC power outlet while preparing the fillings.

CAUTION: Always preheat before use.

2. Lightly glaze both heating plates with a small amount of vegetable oil or a non-stick spray, and close the casing for the sandwich maker to heat up.
3. Begin heating. After about 3 minutes, the red light will turn off, indicating that the sandwich maker is ready for use.
4. Prepare sandwiches by buttering bread on outer surfaces and placing desired ingredients within. Lift safety catch and open the sandwich maker. Place sandwiches on the heating plates.

CAUTION: cooking surface is hot; handle with care.

5. Close the casing to ensure that the sandwich is placed evenly. Lock the safety catch. Normal cooking times will be 3~6 minutes for each sandwich. The red light will turn on and off, as the thermostat keeps the sandwich maker at the proper baking temperature.

CAUTION: The appliance is not to be operated in the open position.

6. Remove the sandwiches from the heating plates with a plastic or wooden spatula. Be careful with your sandwiches, the fillings will be quite hot. Allow to cool for a few minutes before enjoying.
7. Unplug the power supply cord after cooking, and allow the sandwich maker to cool down.