


# BOSS<sup>®</sup>

## Rechargeable USB Blender

B-711

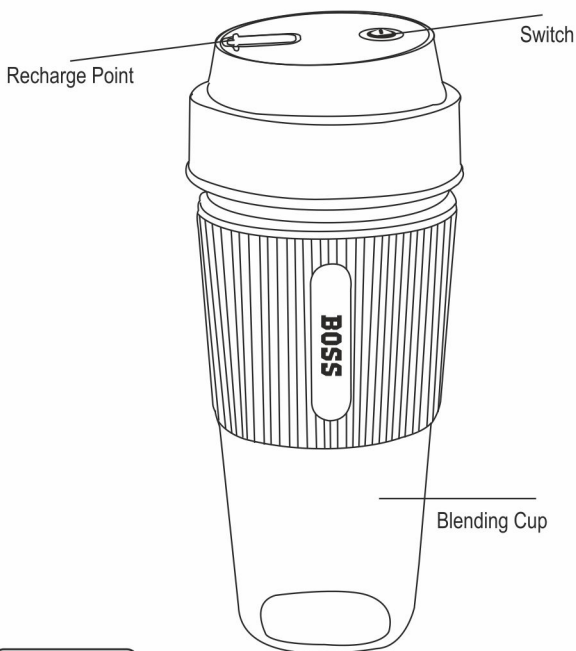

**1** YEAR  
WARRANTY  
ON MOTOR

## INSTRUCTION MANUAL

## GENERAL SAFETY GUIDELINES

Read the user manual before operating appliances

1. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are under supervision for have been given correct and necessary instructions.
2. If the power cord is damaged, please get it replaced.
3. Always keep the unit on a dry and flat surface.
4. Never touch any appliance or equipment with wet or damp hands.
5. Do not let cord to get tangled or come into contact with a hot surface.
6. Do not use any attachments other than the ones supplied by or specified by the manufacturer.
7. Never leave the unit unattended while in operation especially, when children are around.
8. Children should be supervised to ensure that they do not play with the appliance.
9. The equipment is for household use only, do not use it for commercial purposes.
10. To avoid risk of electric shocks, do not immerse the equipment in water or use it in damp conditions.
11. The unit should be cleaned with a damp cloth and immediately wiped dry. Do not use detergents or chemical cleaning agents to clean the unit.
12. In the process of product operation, it is strictly forbidden to open the blender cup to avoid interrupting normal operation.
13. It is strictly prohibited to idle. (i.e. there is no food in the blending cup) or use in excess.
14. Please do not wash or disinfect any parts of the product in dishwasher, microwave oven or hot water.

## WARNING

1. Do not immerse the main unit in water.
2. Do not put overheated food or liquid ( $> 60^{\circ}\text{C}$ ) in the blender cup.
3. This product contains lithium electronic battery. It is strictly prohibited to disassemble the product shell without permission to avoid possible damage to the cell or other hazards.
4. It is strictly prohibited to disassemble, extrude, puncture or short-circuit the product at will or put it into water or fire in an environment with temperature higher than  $60^{\circ}\text{C}$ .
5. Please store and use this product in the environment of  $0-40^{\circ}\text{C}$

## CHARGING MODE :

- A. After the adapter is connected, the LED light will turn red.
- B. When the battery is fully charged, the LED light will turn blue.

The Product has only one key switch, and the specific functions are as follows.

1. Double click the "key" switch continuously, the white indicator light is always on, and the product runs at full speed, when the battery voltage is lower than 7.2V, the red indicator light flashes three times, and the machine stops running, if there is an indicator light flashing in the working process, it means that the battery is running out of power.
2. If food sticks to the blade during the working process, the product will stop immediately and the red indicator light will flash. In the process of indicator light flashing, in order to protect the program of the control board, press the key switch midway and the product will not react.
3. In the process of operation, click and press the key button to stop the machine.
4. Use the blender for 40 seconds with an interval of not less than 3 minutes. After 5 consecutive times of work, the product needs to rest for 10 minutes.

## OPERATION INSTRUCTIONS

### Before the First Use

1. Before using this product for the first time. Please clean the blender cup and the blade with soap solution and dry them thoroughly, the top motor part wiped with a wet cloth and cannot be soaked in water.
2. Before using the product for the first time, please make sure that the battery is fully charged.
3. Wash the fruits cut them into small cubes. Put the cut fruit into cup, add water or milk and other liquids, and the total amount of ingredients and liquids shall not exceed the maximum scale line (300ml) of the blending cup.
4. Rotate and install the top motor cover on the blending cup, tighten the top cover and blending cup and install them in place, so that the food liquid will not leak out.
5. Double click the "key switch" on the product twice, turn the product upside down and put it on the desktop or hold it in your hand, the product starts to work, and the single working time of the product is set as 40 seconds. In the process of working, shake the product left and right, better mixing effect and more delicate taste.

Note: it is recommended to charge for 4 hours for the first time, so as to improve the battery endurance.

### Cleaning

1. Please confirm that the blade stops running before cleaning.
2. Do not use steel ball, abrasive cleaner or corrosive liquid (such as gasoline and acetone) to clean the product.
3. The top motor cover can be wiped with a dry cloth, do not wash, soak or spray it in water or other liquid. so as to avoid damage to the device or leakage of the product.
4. Please wash the inside of the blending cup and the parts in contact with the food with clear water and dry them in time.
5. When storing, please make sure the product is clean

## AUTHORISED SERVICE CENTRE

**For Gujarat, Maharashtra & West Bengal : 9167681234**

### Other Cities

Ajmer	0145-2421785/2423650 9982347880	Hyderabad	040-35841992 / 9347020195
Banglore	080 41249187 / 41138318	Indore	0731-2534689 / 4969975
Belgaum	9986224792	Jaipur	0141-2622483
Bhilwara	01482-224586 / 9414112586	Jodhpur	0291-2435266 / 9414129574
Bhopal	0755 - 4282097	Kota	0744 - 2390532 / 9460056594
Delhi	011-23847057 / 9811206109	Raipur	0771-2533284 / 9425510814
Gulbarga	9741734070 / 9480162059	Rudrapur	9837049123
Hubli	0836-2284897 / 9845277503	Sambalpur	0663-2400042 / 9338025787
		Udaipur	0294-2422075

To Register Your Complaint, Simply Send Hi on Whatsapp



**9309133642**

