
BOSS®



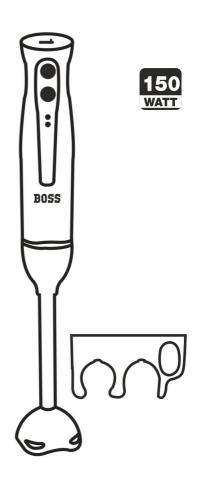



INSTRUCTION MANUAL

Dear Customer,

Thank you for choosing BOSS ZEST Cordless Blender, of which you are now the proud owner.

Being the inventors of Hand Blender in India in 1985, BOSS Hand Blender enable the users to quickly blend larger quantity of ingredients. It is ergonomically designed for a better grip along with powerful motor, which consumes very less power, to offer you the best of services. Make tasty shakes or whip cream or a dip for any dish that you are planning to cook for your family with much ease.

 
Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Hand Blender, to get the best result and trouble free operation.

With Best Wishes,

BOSS®

KNOW YOUR APPLIANCE

- 1. Usb Cable
- 2. Usb Port (input)
- 3. Usb Port (output)
- 4. Top Cover
- 5. Start/stop Button(press 5sec)
- 6. Switch Button
- 7. Indictor Red Light
- 8. Indictor Blue Light
- 9. Main Body
- 10. Decoration Ring
- 11. Coupling Of SS Blending Shaft
- 12. SS Blending Shaft
- 13. Wall Mount



TECHNICAL DATA

13

Model No	B-129	
Input /Output Voltage	DC 5V 2A	
Rated Wattage	150W	
Charging Time	2.0 Hours	
Battery Capacity	1300mAh*2	
Rotation Speed of Motor	12000RPM±12%	
Working time	Blending : 1 Minute	
Rest Time	3 Minutes	
Fully Charge	Blending : 10-12 times	

The specifications and design are subject to change without notice.

IMPORTANT SAFEGUARDS

WARNING: When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- To protect against electrical shock, do not put the motor part, cord or electrical plug of this
 hand blender in water or other liquids. Only the detachable blending shaft of this appliance
 have been designed for immersion into water or other liquids. Never submerge any other
 part of this unit. If hand blender falls into liquid, Press stop button, clean the Unit & USB
 Port. Do not reach into the liquid without stopping unit first.
- 2. Let hot ingredient cool down before processing them.
- This product has a built-in lithium battery. It is strictly forbidden to disassemble the product casing to avoid damage or other damage to the battery.
- It is strictly forbidden to disassemble, squeeze, puncture, short-circuit the product or put it into water, fire or in an environment where the temperature is higher than ≥60±.

WARNING

- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper be used only when the unit is not running.
- 2. This appliance is intended for household use only.
- 3. Never use your fingers or an object (e.g. a spatula) to push ingredients down the feed tube while the appliance is running.
- 4. If a process is not finished in the rated time, please turn off the power to cool the appliance for 3 minutes before next processing.
- 5. Never let the appliance run unattended or work overload.
- 6. Blending foods such as bananas that are prone to foam may cause blocking.
- If the blades get stuck, make sure the blades stop running before you remove the ingredients that block the blades.
- 8. Do not disassemble or modify this product yourself.
- Clean the parts that come into contact with food immediately after use. Be very careful
 when you handle the blades. Be especially careful when you remove them from the bowl
 or jar, when you empty the bowl or jar and when you clean them. Their cutting edges are
 very sharp.

- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper be used only when the unit is not running.
- 2. This appliance is intended for household use only.
- Never use your fingers or an object (e.g. a spatula) to push ingredients down the feed tube while the appliance is running.
- 4. If a process is not finished in the rated time, please turn off the power to cool the appliance for 3 minutes before next processing.
- 5. Never let the appliance run unattended or work overload.
- 6. Blending foods such as bananas that are prone to foam may cause blocking.
- If the blades get stuck, make sure the blades stop running before you remove the ingredients that block the blades.
- 8. Do not disassemble or modify this product yourself.
- Clean the parts that come into contact with food immediately after use. Be very careful when you handle the blades. Be especially careful when you remove them from the bowl or jar, when you empty the bowl or jar and when you clean them. Their cutting edges are very sharo.
- 10. This appliance can be used by children aged from 12 years and above and persons with

How to Start & Stop the Blender

Before using the product for the first time, please make sure the battery is fully charged.

1. Charging your appliance

Connect USB cable to the motor part, connect the charger (DC5V, 2A) into a mains socket, the indicator light will be constantly flashing Red. When the motor is fully charged, it will turn blue.

2. How to switch the appliance

Keep pressing down the start/stop button to switch the appliance, the indicator light will be constantly flashing red. Press the switch button, the appliance will start to work and the indicator light will turn blue. Release the switch button, the indicator light flashing red. Press start/stop button again to turn off the blender, indicator light is Off.

Indicator Status	Battery Status	Appliance Status	Next Operation
Constant blue	Full	During the working	
Flashing blue	Low	During the working	
Constant red	Nearly empty	During the working	Charge your appliance
Red light flash for 3 minutes		The blades get stuck	The appliance does not the work, after 3 minutes, press down the button again to switch the appliance

Attention

- 1) The appliance does not work when charging.
- 2) If the blades get stuck, make sure the blade stops running before you remove the ingredients that block the blades.

Trouble Shooting

Question	Indicator Status	Reason	Operation
The appliance does not work	Flashing blue	The button is not kept pressing	Keep pressing the switch button.
The appliance stop during working	Constant red	Low battery	Charge your appliance.
Getting stuck	Red light flash for 3 minutes	Food is too big	Remove the food, cut into small pieces.
No signal when charging	No red light	Wrong connection Charger is not connected Properly.	Check the connection, Use a proper charger.

How to use the hand blender

- 1) Pre-cut foods into small pieces for easier blending.
- 2 Cleaning the beaker, fill the food (less 200g) and water (do not exceed the maximum capacity).
- 3 Attach the blender shaft to the motor unit.
- 4 Press the button to start the appliance & follow the start & stop instructions as mentioned above.

Care & Cleaning

- Always clean the hand blender thoroughly after use.
- Make sure the blades stop running before cleaning.
- Do not use abrasive cleaners that could scratch the surface.
- Do not immerse the motor part in water or any other liquid. Clean with a damp cloth only.
- All other parts can be cleaned in a warm water with some washing-up liquid.
- When processing foods with high pigment content (e.g. carrots), the accessories may become discolored. Wipe these parts with vegetable oil before cleaning them.
- After cleaning, let them dry by air, then store them properly for future use.

AUTHORISED SERVICE CENTRE

For Gujarat, Maharashtra & West Bengal: 9167681234

Other Cities Aimer 0145-2421785/2423650 Hyderabad 040-35841992 / 9347020195 9982347880 Indore 0731-2534689 / 4969975 080 41249187 / 41138318 **Banglore** Jaipur 0141-2622483 Belgaum 9986224792 0291-2435266 / 9414129574 Jodhpur 0744 - 2390532 / 9460056594 **Bhilwara** 01482-224586 / 9414112586 Kota 0771-2533284 / 9425510814 Bhopal 0755 - 4282097 Raipur Delhi 011-23847057 / 9811206109 Rudrapur 9837049123 0663-2400042 / 9338025787 Sambalpur Gulbarga 9741734070 / 9480162059 0836-2284897 / 9845277503 Udaipur 0294-2422075 Hubli

To Register Your Complaint, Simply Send Hi on Whatsapp



