

BOSS®



Aerofry Air Fryer

B-552



SmartFry Air Fryer

B-551



2 YEARS
WARRANTY
ON PRODUCT

6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION

INSTRUCTION MANUAL

Dear Customer,

Thank you for choosing BOSS Air Fryer of which you are now the proud owner. This innovative kitchen appliance is designed to make your favourite fried foods healthier by using up to 80% less oil. With its sleek design, powerful heating element, and a spacious non-stick basket, this air fryer is perfect for anyone looking to enjoy crispy, delicious meals without the guilt.

Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Air Fryer to get the best result and trouble free operation.

 
With Best Wishes,

BOSS®

KNOW YOUR APPLIANCE

B-551 - Smartfry

- 1 Basket Handle
- 2 Frying Trivet
- 3 Touch screen- 7 cooking function
- 4 Basket

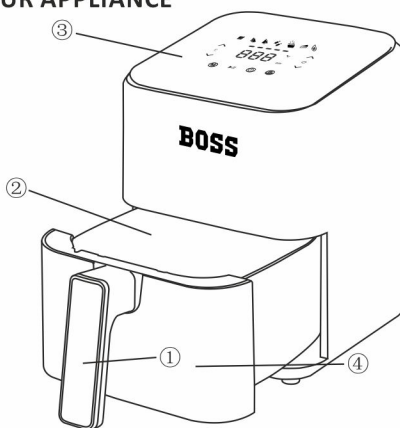


TECHNICAL SPECIFICATIONS

Rated Voltage : 230V~50Hz,
Power Input : 1200W
IPX0, Class I, Single Phase
Pollution Degree 1
Capacity : 4 Ltr
Model No : B-551 Smartfry Airfryer

B-552 Aerofry

 - 1 Basket Handle
- 2 Frying Trivet
- 3 Touch screen- 7 cooking function
- 4 Basket

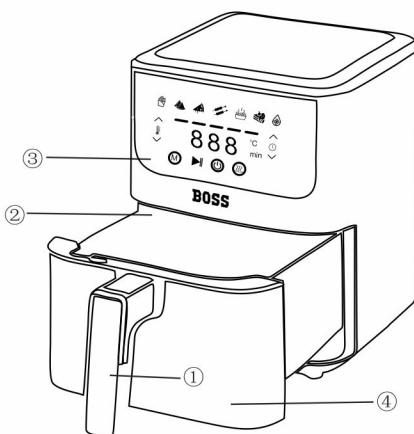

TECHNICAL SPECIFICATIONS

Rated Voltage : 230V~50Hz
Power Input : 1500W
IPX0, Class I, Single Phase
Pollution Degree 1
Capacity : 6 Ltr
Model No : B-552 Aerofry Airfryer

IMPORTANT








Please read the following instructions carefully before using the Air Fryer

1. To prevent electric shock, do not allow any water or other liquids to enter the appliance.
2. Always place the ingredients to be fried in the removable pot to avoid contact with the heating elements.
3. Do not obstruct the air inlet and exhaust openings while the appliance is in operation.
4. Avoid filling the grill with oil as this may pose a fire hazard
5. Never touch the interior of the appliance while it is in operation.
6. Before connecting the appliance, verify that the indicated voltage on the appliance matches the local mains voltage in your country.
7. Do not use the appliance if the plug, power cord, or appliance itself is damaged.
8. If the power cord is damaged, it must be replaced at an authorized service center or by similarly qualified personnel to avoid hazards.
9. When the appliance is switched on or cooling down, keep it and its mains cord out of the reach of children
10. Ensure that the mains cord is kept away from hot surfaces.
11. Do not plug in the appliance or operate the control panel with wet hands
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
13. Avoid placing the appliance on or near flammable materials such as tablecloths or curtains.
14. Refrain from positioning the appliance against a wall or other appliances. Maintain a minimum of 10cm space at the back and sides and 10cm at the top of the appliance. Do not place any objects on top of the appliance.
15. The appliance should solely be utilized for the purposes outlined in this manual.
16. Do not leave the appliance operating unattended.
17. Hot steam is emitted through the air exhaust openings during frying. Keep a safe distance from the steam and exhaust openings to prevent scalding. Take caution when removing the grill from the appliance a shot steam and air may be present.
18. The surface beneath the appliance may become hot during use.
19. Immediately detach the appliance from the power source if you observe dark smoke emerging from it. Wait until the smoke ceases before removing the grill from the appliance.


How to Use Your BOSS Air Fryer

1. Connect the mains plug into an earthed wall socket.
2. Carefully pull the basket out of the air fryer, Place the ingredients in the basket.
3. Slide the basket into the Air Fryer
4. Press the Power on/off button, the LCD display with all icon will light
5. Press the menu to choose settings (7 preset functions with the ability to adjust temperature and time).
6. After choosing the desired settings, press icon to ►|| start cooking
7. During the cooking process, if you want to adjust Time or Temperature, you can easily adjust by pressing the respective buttons up/down
8. The appliance will chime automatically to alert you that the cooking cycle has finished. Pull the pan out of the appliance and place it onto the heat-resistant holder
9. To remove foods which would have collected oil once finished cooking, please use tongs to pick these up
10. To remove foods which would not have excess oil in the pan, Release the basket, and pour ingredients onto a plate or bowl.
11. After use, turn off the appliance and unplug from the wall.

7 Cooking Functions

Cooking Preset	Icons	Temperature □	Time (Min)
French Fries		200°C	15 Min
Samosa		180°C	20 Min
Pizza		180°C	12 Min
Paneer Tikka		200°C	15 Min
Puff		180°C	20 Min
Cake		160°C	25 Min
Defrost		115°C	12 Min

 CONTROL PANEL

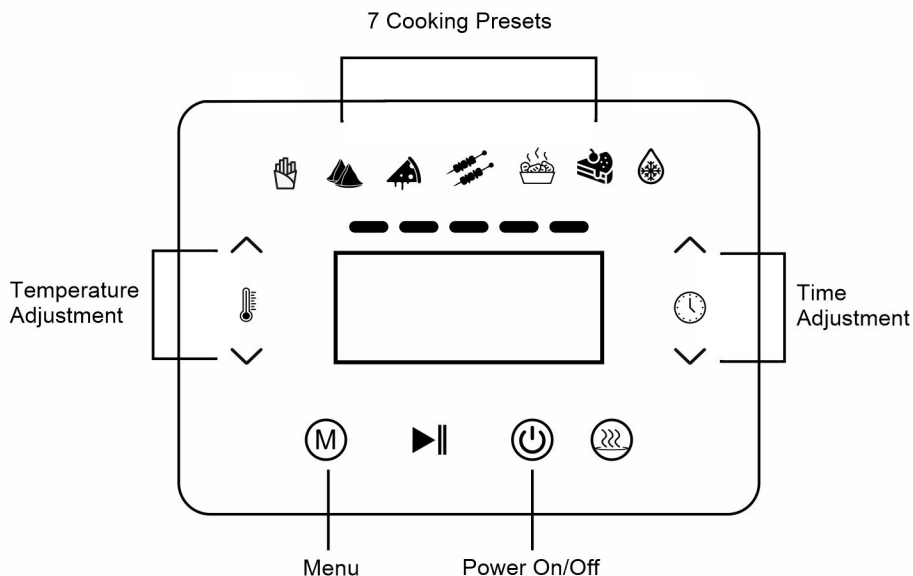

OPERATING BUTTONS

Power on : Press Power Button To Light The Led Display.

Preset Programs : Press Food Icon.

Stop/Cancel:

Tap Stop/cancel To Stop Cooking. Tap Start To Resume Cooking.
Removing The Basket From The Air Fryer During Cooking Will Stop Cooking.
Returning The Basket To The Air Fryer Will Automatically Resume Cooking.
Tap Stop/cancel Twice To Cancel Cooking

Temperaure/Time Control

Press TEMP/TIME for temperature control, then press + or -, temperature will increase or decrease. Press TEMP/TIME again for time control, then press + or -, time will increase or decrease

PREHEAT/TURN REMINDER

Tap PREHEAT/TURN REMINDER to enable or disable these settings. PREHEAT/TURN appearing red on the display when enabled. Preheat and turn reminder are on by default for recommended presets.

Care & Maintenance Of Your BOSS Air Fryer

1. Do not disconnect until the cooling fan has stopped after the cooking is over. Disconnecting without proper cooling can damage your air fryer.
2. It is recommended to clean the appliance thoroughly after each use. Both the grill, basket, and the interior of the appliance are equipped with a non-stick coating, so it is important to avoid using metal utensils or abrasive cleaning materials that could potentially damage the coating.
3. Clean the grill and basket by using hot water, mild dish soap, and a non-abrasive sponge. Alternatively, you can also use a dishwasher-safe cleaning liquid to remove any remaining dirt.
4. The ingredients to be checked in between the cooking to suit your requirement of frying & crispiness.
5. Wipe the outside of the appliance with a moist cloth.

Note: The grill and basket can be safely cleaned in a dishwasher.

Remember to always follow the manufacturer's instructions for the specific cleaning and maintenance requirements of your appliance to ensure its longevity and optimal performance.

CAUTION: DO NOT IMMERSE IN WATER

AUTHORISED SERVICE CENTRE

For Gujarat, Maharashtra, West Bengal, Chhattisgarh & Rajasthan : 9167681234

Other Cities

Ajmer	0145-2421785 / 9982347880	Jodhpur	9167681234
Banglore	080 41249187 / 41138318	Jaislmer	9167681234
Belgaum	9986224792	Kota	0744 - 2390532 / 9460056594
Bhilwara	01482-224586 / 9414112586	Raipur	9167681234
Bhopal	9167681234	Rudrapur	9837049123
Delhi	011-23847057 / 9811206109	Sambalpur	0663-2400042 / 9338025787
Gulbarga	9741734070 / 9480162059	Udaipur	0294-2422075
Hubli	0836-2284897 / 9845277503	Bikaner	9167681234
Goa	9167681234	Jabalpur	9167681234
Hyderabad	040-24600195/9347020195	Ghaziabad	9167681234
Indore	9167681234	Pali	9167681234
Jaipur	9167681234	Sirohi	9167681234



Scan To Register
Extended Warranty &
Service Support

93091 33642