

BOSS®

Cresta

Multi Cook Kettle with Steamer
B-827

600
WATT



1 YEARS
WARRANTY
ON PRODUCT

INSTRUCTION MANUAL

Please read all instructions carefully before using • T & C Apply*

Dear Customer,

Thank you for choosing BOSS Cresta Multi Cook Kettle with Steamer, of which you are now the proud owner.


BOSS brings to you an Multi Cook Kettle with Steamer which is perfect for your daily home needs. Prepare hot water, instant tea etc., in a matter of minutes with BOSS Cresta Multi Cook Kettle with Steamer. With smart features like Concealed Heating Element, Automatic Shut off, Ergonomic Handle, Elegant Body etc., this glamorously designed Multi Cook Kettle with Steamer is a must have accessory for your modern kitchen. 600W power makes the boiling more efficient, it's large capacity suits for a whole family and will be ready to use for tea, coffee, pasta, hot chocolate, oatmeal, instant soup and so on. This Multi Cook Kettle with Steamer has illuminated power indicator which glows when power is on and shuts when power is off. This makes BOSS Cresta Multi Cook Kettle with Steamer a perfect boiling partner for your kitchen!

Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Multi Cook Kettle with Steamer, to get the best result and trouble free operation.

With Best Wishes,

BOSS®

KNOW YOUR APPLIANCE

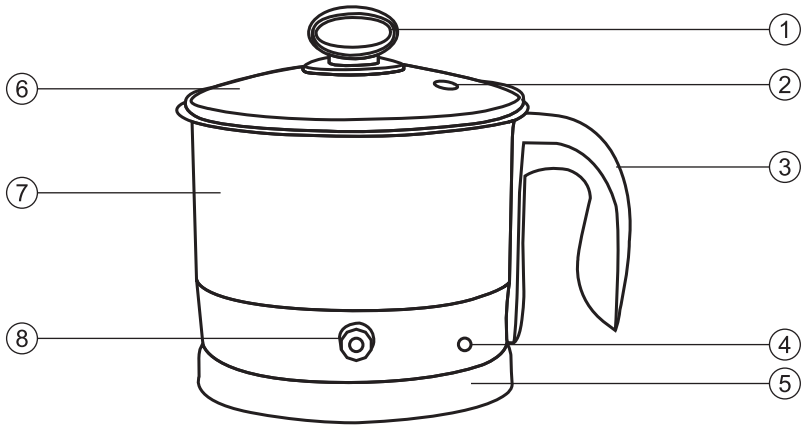

1. Lid Carry Handle
2. Air Vent Output
3. Handle
4. Power Indicator Light
5. Power Base
6. Glass Lid
7. Stainless Steel Housing
8. Temperature Control Knob

TECHNICAL DATA

Product | Multi Cook Kettle with Steamer
Model | Cresta
Power | 600 Watt
Voltage | 230V~, 50Hz
Capacity | 1.5 L (Max)
Housing | Stainless Steel

Important

Please read the following instructions carefully before using the BOSS Cresta Multi Cook Kettle with Steamer.

Do's

1. Before plugging the socket ensure that the supply voltage in accordance with the rated voltage.
2. Use on level and heat resistant surface. Keep away from hot surfaces and naked flame.
3. The kettle becomes hot during use, so hold it by the handle only.
4. Avoid contact with steam coming out of the spout area when pouring the water or when the lid is open.
5. Ensure that the cable is not touching the water.
6. Always make sure that lid is properly closed during the boiling operation.
7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
8. Keep the connector base away from dampness and splashes.
9. In case of any defect, contact the nearest authorized dealer / service centre.

Don'ts

1. Check the level indicator (MAX) on the main body while filling the water. If the kettle is overfilled, boiling water may be ejected while boiling.
2. Do not remove the kettle from connector base while in operation. Switch OFF the appliance first.
3. Never leave the kettle unattended during operation.
4. Do not operate the kettle if the cord plug shows the signs of damage.
5. Do not immerse the kettle in water.

How to Use

1. Wind out the main cord only as much as necessary. Draw it out through the opening in the base and connect to a suitable main socket.
2. Remove the lid and pour water into the kettle. While doing so, watch the water level mark on inner stainless steel body. Never go below the minimum or above the maximum (MAX) mark.
3. Close the lid and ensure that the kettle is switched OFF before setting it on the base.
4. Place the kettle on the connector base and switch ON the supply. Rotate the temperature control knob to the max level. The indicator LED light will glow indicating that the appliance is in operation.
5. When the water boils the appliance will shut off power automatically and the indicator light will go OFF.
6. When the water boils the temperature control mechanism operates to stop the boiling. The steam generated during boiling opens the switch.
7. Uplifting the kettle from the socket when not in use.

Before First Use

After unpacking the unit and before any use, make sure the mechanical parts of the kettle and all its attachments not damaged.

1. Clean the kettle by filling it with clean water and bringing to boil. Pour away the water.
2. Repeat the process twice.
3. Carefully go through the instruction manual before starting the boiling operation.

Note :

If you wish to stop the boiling process or interrupt it temporarily turn the temperature control knob anti clockwise.

The kettle can be used for multi function like : boiling water, Steaming corn & vegetable and cooking noodle etc.

360° Cordless

The kettle is fitted with 360° cordless system. It means that the kettle can rotate 360° in base as per your convenience and move the handle to your desired direction. Also kettle can be carried to other place without hassle of cord.

Boil Dry Protection

This kettle is designed with built-in boil dry protection, which safeguards the appliance when operated with too little or no water. If the water level is insufficient, the heating plate will reach a high temperature and the protection system will automatically stop further heating to prevent damage. Once this occurs, simply switch off the kettle, unplug it, and allow it to cool down before refilling with the required amount of water. The design ensures durability during everyday cooking and boiling tasks. Occasional drops of water found beneath the kettle are usually condensation and should not be considered a malfunction.

Food Grade Stainless Steel

This kettle is crafted from SS201 food-grade stainless steel, known for its strength, durability, and resistance to rust under normal kitchen use. The matte-finish exterior enhances its premium look while ensuring safe contact with boiling water, making it a reliable choice for everyday use.

Warning

1. This kettle is meant for boiling water ONLY.
2. This kettle is for domestic use ONLY.

Care & Maintenance Of Your BOSS CRESTA Multi Cook Kettle With Steamer

1. Always remove the plug from the mains socket before cleaning the base. Let the kettle cool completely.
2. Descale at regular intervals. Use a descaling agent.
3. Clean the outside of the kettle and the base with a soft dry cloth. Do not use an abrasive material for cleaning the kettle.
4. The kettle must be dried completely before storage.
5. Do not tamper with the appliance yourself. Contact the nearest authorized service centre.

Storage

1. Ensure the electric kettle is completely cool & dry.
2. Only wrap the cord around the base of electric kettle, not to cause damage.
3. Keep the electric kettle in a cool & dry place.

Did you know this about your kettle ?

- Boiling some water in the electric kettle to wash a few dishes is more energy efficient than filling the sink with hot tap water.
- Boiling water in the electric kettle is more efficient than boiling water on the stove.

PRODUCT SUPPORT HELP LINE

91676812334



**Scan to Register for
Service Support**

 **93091 33642**