

BOSS®



Nutri Pro with Chopper

B-637

2 YEARS
WARRANTY
ON MOTOR

6 MONTHS
EXTENDED
WARRANTY
ON REGISTRATION

INSTRUCTION MANUAL

Please read all instructions carefully before using • T & C Apply*

Dear Customer,

Thank you for choosing BOSS Nutri Pro with Chopper of which you are now the proud owner.

 
There is no sure way to good health than a glass of fresh healthy and tasty fruit juice, especially if it's made with the sleek and elegant BOSS Nutri Pro with Chopper. Build to save you time, space and energy, the super-fast motor and sharp steel blades breakdown the food completely, extracting all nutrients. This compact and sleek design consumes less space as compared to the bulky food processors and mixers and gives you complete solution. It is also great for dry-grinding the hardest spices like garam masala, jeera, etc and coffee beans. Make tasty chutneys, purees and shakes in seconds. BOSS Nutri Pro with Chopper with Attractive finish is just perfect for a modern kitchen.

Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Nutri Pro with Chopper, to get the best result and trouble free operation.


With Best Wishes,

BOSS®

KNOW YOUR APPLIANCE

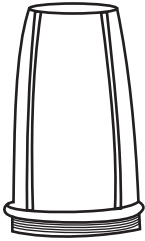

Large Cup

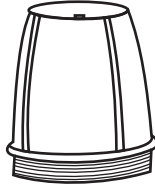 

Small Cup



Seasoning Cap



 
Blending Jar Base



Grinding Jar Base



Cup Lid

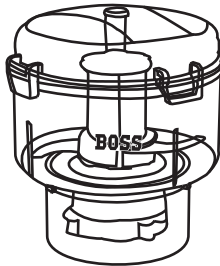


Chopper Jar

IMPORTANT

Please read the following instructions carefully before using Nutri Pro with Chopper.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Before being used, the motor works in running-in phase, there may be slight peculiar smell and spark, this is normal, after the motor works for some period, the above phenomenon will disappear.
- If the mains cord is damaged, you must have it replaced by manufacturer, or by the Service center authorised in order to avoid a hazard.
- Unplug the appliance when not in use. Make sure the appliance is unplugged before assembling, Disassembling, adding additional ingredients and cleaning.
- The Jar base should be firmly locked with the cup, or there is a risk of water leakage and cup falling.
- The blade is very sharp, pay attention not to hurt your hand when cleaning and disassembling the machine.
- The motor of this machine has a over-temperature protection device, the machine will be paused as a result of overheating during operating, at this moment, you should cut off the power supply, do not restart it till it is completely cooled.
- Do not directly wash the main unit with water. It will cause electrical failure or accident of motor and switch. Clean the main unit with damp cloth & wipe it dry.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
- This appliance is intended for household usage only.

 
HOW TO USE BOSS NUTRI PRO with Chopper for Blending & Grinding

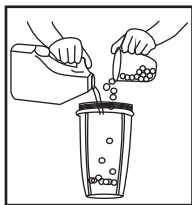

Put the machine on a stable table.

Place the Cup on the flat surface with the open end facing up. Fill up the Cup with your favourite ingredients.

 
Be sure not to fill ingredients more than capacity mentioned in the user manual.

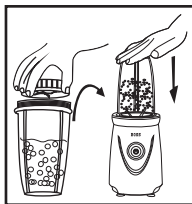

Fasten the Jar Base on the open end of the Cup. Turn the Cup upside down, line up arrows on the base and place the Cup on the main unit.

To lock the Cup in the base for hands-free operation, simply turn the Cup clockwise on the main unit.

 Blending will stop once you unlock the Cup from the main unit.

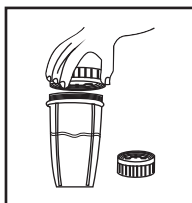

Unplug the machine once the blending is over twist off the jar base and pour out the ingredients or place on to the cap and then tighten it clockwise.

 
PREPARE TO USE - Chopper

Assembly Instructions

- 1 Insert the blade into the centre of the chopper bowl.
- 2 Put the ingredients into the bowl. Do not overfill.
- 3 Secure the lid tightly on the chopper bowl.
- 4 Align the chopper attachment with the Nutri and twist it into place until it locks securely.

Operating Instructions

- 1 Choose the desired speed setting on your Nutri if model have, depending on the texture you want (continuous for finer results).
- 2 Stop periodically to check the consistency of the chopped ingredients.
- 3 Once done, switch off the Nutri, unplug it, and carefully detach the chopper attachment.

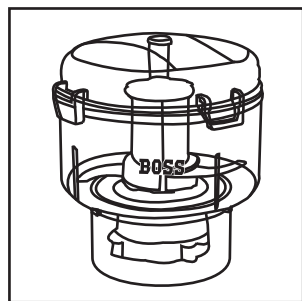


CLEANING

- 1) Ensure the machine is off when cleaning the body.
- 2) Clean the main unit with damp cloth instead of water. Do not wash the product by dishwasher.
- 3) The machine should be used often, otherwise place it in the dry and ventilated environment.
- 4) Do not operate continuously for more than the recommended time (usually 30 seconds at a time).

TECHNICAL DATA

DOMESTIC ELECTRIC FOOD MIXERS (LIQUIDIZER & GRINDER)

Voltage Supply : 230V~, 50Hz, 400W, Single Phase,

Rating : Short Time (30 min), Class II 

Normal Load : 50 grams Urad Dal well soaked in water

Class of Insulation : H Pollution Degree - 1, IPX0,

Dry Grinder (2 Jar) : 50 ml, Not Suitable for whisking egg whites.

PRODUCT SUPPORT HELP LINE

9167681234



Scan to Register for
Service Support



93091 33642