

BOSS®

Tosh

Griller Toaster

B-512



INSTRUCTION MANUAL

Please read all instructions carefully before using • 2 Years Warranty*

Dear Customer,

Thank you for choosing BOSS Tosh Griller, of which you are now the proud owner.

Delicious Grilled snacks are now simple to make with BOSS Tosh Griller. Prepare healthy and tasty sandwiches in the convenience of your kitchen. The non-stick coated plates need less oil while grilling, making the sandwich healthy and are easier to clean too. Get perfectly Grilled sandwiches that are crispy on the outside and soft on the inside with BOSS Tosh Griller.


Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Tosh Griller, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCES LLP

KNOW YOUR APPLIANCE

- 1 Ready Lamp
- 2 Power Lamp
- 3 Handle Clip
- 4 Top Housing
- 5 Cooking Plate
- 6 Bottom Housing

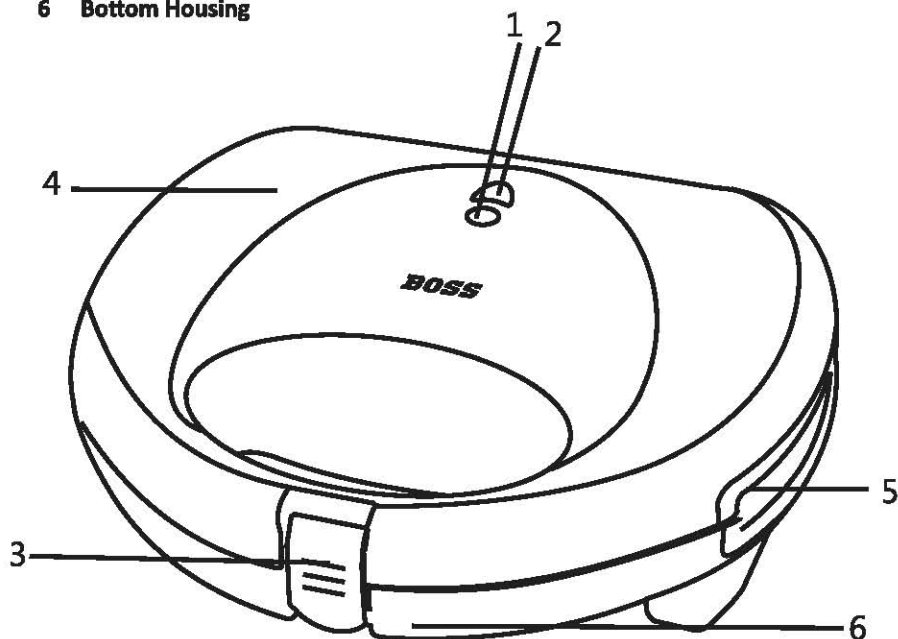

TECHNICAL SPECIFICATIONS

Model No	B-512
Power Consumption	750W
Voltage	230V AC 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice*

IMPORTANT

Please read the following instructions carefully before using the sandwich maker.

1. Do not touch hot surfaces. Use handles or knobs.
2. To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
3. Unplug from outlet when not in use and before cleaning. Allow cooling before putting it on or taking off parts.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility or call our customer service number for information on examination, repair, or adjustment.
5. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
6. Do not use outdoors. Do not let cord hang over edge of table or counter, or touch hot surfaces.
7. Do not place on or near a hot gas, electric burner, in a heated oven other inflammable materials (such as benzene, paint thinner, sprays, etc.)
8. Preheat the unit before using.
9. Do not leave the appliance unattended when switched on.
10. To disconnect, remove plug from wall outlet.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
12. The temperature of accessible surfaces may be high when the appliance is operating.
13. HOUSEHOLD USE ONLY.

PREPARE TO USE

1. Wipe the surface of the cooking plates with a damp cloth and dry.
2. Season the plate with butter or margarine if desired.

NOTE : FIRST USE WILL BURN OFF THE MANUFACTURER'S PROTECTIVE COATING. THIS MAY CAUSE SLIGHT SMOKING FROM THE UNIT. IT IS NOT HARMFUL AND WILL STOP AFTER FIRST USE. BE SURE ROOM IS PROPERLY VENTILATED.

HOW TO USE

1. When the plate is placed properly, close the lid of the toaster to preheat. Switch the power "ON" and wait for 3 minutes.
2. The red indicator indicates power ON, When the sandwich maker's thermostat has reached the right temperature, the green indicator will go ON.
3. Place the sandwich in the griller once the green indicator is ON and gently but firmly close the lid until you feel the front lock click is in place.
4. During the toasting and process of making the sandwiches, the green control light will periodically turn on and off. This indicates that the appliance is heating itself, so as to maintain the desired temperature.
5. Your sandwich will be ready in 2-3 minutes or longer to suit your taste.
6. Use only wooden or plastic spatula to remove sandwich out of the toaster.

FOR BEST RESULTS

- Always preheat your sandwich maker.
- Always butter the outsides of the bread slices.

CLEANING

1. Always unplug this product from power source and wait until it cool down before cleaning.
2. Ensure the heating plate is completely cooled before it is taken out.
3. Wash heating plate with a soft sponge, Avoid using scratching or sharp utensils, as they will scratch the non-stick surface.
4. Do not use cleansers or oven cleaners on the heating plates.
5. To clean out parts, handles and other parts, use a damp cloth.

CAUTION: DO NOT IMMERSE IN WATER