


# BOSS®

**JumboMaxx**  
GRILLER

B-525

**1800**  
**WATT**

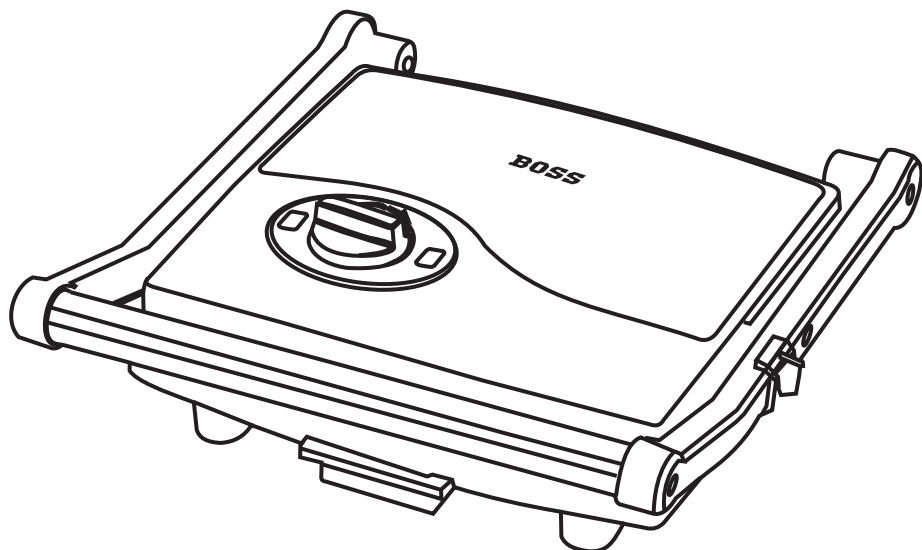

**2** YEARS  
WARRANTY  
ON PRODUCT

**6** MONTHS  
EXTENDED  
WARRANTY  
ON REGISTRATION

## INSTRUCTION MANUAL

Please read all instructions carefully before using • T & C Apply\*

Dear Customer,

Thank you for choosing BOSS Jumbomaxx, of which you are now the proud owner.

Delicious Grilled snacks are now simple to make with BOSS Jumbomaxx. Prepare healthy and tasty sandwiches in the convenience of your kitchen. The non-stick coated plates need less oil while toasting making the sandwich healthy and are easier to clean too. Get perfectly Grilled sandwiches that are crispy on the outside and soft on the inside with this appliance.


Please read and follow all the instructions given in this user manual carefully, prior to using your BOSS Jumbomaxx, to get the best result and trouble free operation.

With Best Wishes,

BOSS APPLIANCES LLP

## KNOW YOUR APPLIANCE

- 1 Ready Lamp
- 2 Power Lamp
- 3 Handle Clip
- 4 Top Housing
- 5 Cooking Plate
- 6 Bottom Housing

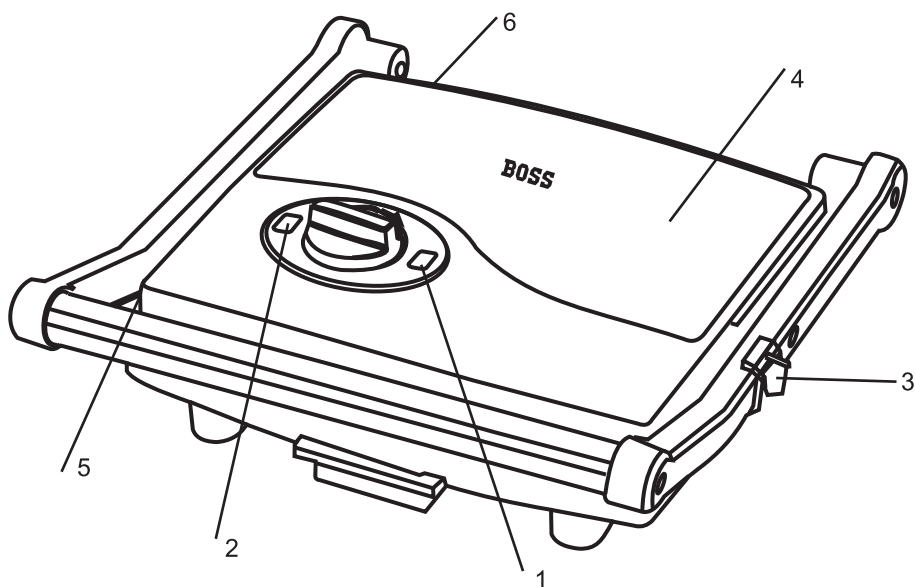

## TECHNICAL SPECIFICATIONS

Model No	B-525
Power Consumption	1800W
Voltage	230V~ 50 Hz
Protection	I
Indicator Light for operational safety	Yes

The specifications and design are subject to change without notice\*

## IMPORTANT

1. Read and familiarize yourself with all operating instructions before attempting to use the grill.
2. Keep the appliance out of the reach of children.
3. As all cooking times vary do not leave the appliance unattended while switched on.
4. Beware that surfaces may become very hot during and after use always use an oven glove or cloth. Use the handles provided and do not touch heating surfaces.
5. Always disconnect the plug from the mains before cleaning--- wipe clean only --do not immerse unit, plug or cord in water.
6. Always allow the unit to cool down before storage or cleaning.
7. Always ensure that the plastic drip tray is in place before use, remove and empty the drip tray before storing the unit.
8. Always retain user instructions safely for future use and reference.
9. There are no user serviceable parts, if the unit fails, consult a qualified electrical repair center or contact the supplier.
10. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
11. Children should be supervised to ensure that they do not play with the appliance.
12. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
13. Domestic use only.
14. Do not use outdoors.

## HOW TO USE GRILLER

1. Before first use or after long periods of non-use wipe the non-stick cooking plates with a damp cloth to ensure clean surfaces.
2. For best results always pre-heat the grill for three to four minutes before use by plugging in to the mains and allowing it to heat up whilst closed, without any food inside.
3. Open the lid using an oven glove or cloth, ensure it engages into the upright position, and carefully position the food to be cooked onto the bottom plate.
4. Carefully close the lid, the power light will glow to indicate the grill is in use.
5. Check regularly to see how the food is cooking, it is not necessary to turn the food as it cooks from both top and bottom plate.
6. When the food is fully cooked remove it carefully from the grill using specially shaped spatula or plastic/wood tools suitable for non-stick surfaces.
7. Immediately after use unplug the grill and allow it to cool sufficiently before cleaning and storage, always ensure that the drip tray is removed and cleaned.

## CLEANING & MAINTENANCE

1. Ensure that the unit is unplugged and cool before attempting cleaning.
2. Never use a scouring pad or abrasive cleaner as this will damage both plastic and metal parts.
3. The drip tray may be washed in hot soapy water.
4. Use specially shaped spatula or plastic/wood tools to scrape off any excess food adhering to the non-stick plates, a wet non-abrasive sponge or paper towel can be used to rub off stubborn patches.
5. Dry the non-stick plates thoroughly using a paper towel, the outer plastic case can be cleaned with a paper towel or soft cloth.

**CAUTION:** DO NOT IMMERSE IN WATER